



Ersatzteilzeichnung
 Hebebühne Typ 2.32HEL
 USA ab Bühne Nr. 21 192
 Deutschland ab Bühne Nr. 21 192

Technische Änderungen vorbehalten!

PART No.	DESCRIPTION	PART No.	DESCRIPTION
H - 001	Pump Mount	H - 157	Rubber Pac
H - 002	Clutch	H - 163	Straight Fitting with Nut
H - 003	Pump	H - 164	Adjustable T Stud with 2 Nuts
H - 011	Hydraulic Pipe	H - 166	Swivel Fitting
H - 012	Swivel Fitting	H - 167	Straight Fitting
H - 013	Bleeding Screw	H - 168	Reduction Stud
H - 014	Sight	H - 171	Hydraulic Pipe
H - 015	Oil Filter	H - 175	Hydraulic Pipe
H - 019	Oil Reservoir	H - 181	Equalizing Handle
H - 021	Safety Valve for Pipe-Hose leak	H - 182	Bedienhebel für Kugelhahn
H - 022	Swivel Fitting	H - 200	Switch Plate
H - 023	Swivel Fitting without Nut	H - 201	Rod for Switch Plate
H - 024	Straight Fitting without Nut	H - 220	Adjustable Fitting for Steel Wire
H - 064	Differential Cylinder	H - 222	Spring
H - 065	Pin Cylinder	H - 226	Safety Latch Master Side
H - 066	Cylinder Housing Plate	H - 227	Safety Latch Slave Side
H - 071	Convex Ring	H - 228	Straight Fitting
H - 072	Concave Ring	H - 229	Mounting Plate
H - 073	Washer Top	H - 230	Operation Handle
H - 074	Set Screw	H - 231	Steel Wire Mounting Plate
H - 077	Motor	H - 232	T - Fitting
H - 078	Capacitor	H - 233	Hydraulic Hose
		H - 234	Hydraulic Hose
H - 083	Switch	H - 235	Hydraulic Pipe
H - 102	Pulley	H - 236	Hydraulic Pipe
H - 103	Rubber Profile	H - 237	Hydraulic Pipe
H - 111	Locating Segment	H - 238	Hydraulic Pipe
H - 112	Lift Rod	H - 239	Hydraulic Pipe
H - 114	Spring	H - 240	Hydraulic Pipe
H - 117	Stud	H - 241	Hydraulic Pipe
H - 118	Split Washer	H - 242	Hydraulic Pipe
H - 123	Cover Plate Upper	H - 243	Main Valve
H - 124	Rubber Cover	H - 244	Switch A-Connection
H - 125	Clamp Plate for Rubber Cover	H - 245	Switch B-Connection
H - 126	Front Cover Plate		
		H - 247	Master Side Post
H - 131	Anchor	H - 248	Upper Post Master Side
H - 147	Stud	H - 249	Slave Side Post

PART No.	DESCRIPTION	PART No.	DESCRIPTION
H - 250	Upper Post Slave Side		
H - 251	Height Adjustbl. Post Master Side		
H - 252	Height Adjustbl. Post Slave Side		
H - 253	Upper Square Support		
H - 254	Pulley Guide Master Side		
H - 255	Pulley Guide Slave Side		
H - 256 A	Carrying Arm Long Master Side		
H - 256 B	Carrying Arm Long Slave Side		
H - 257 A	Carrying Arm Short Master Side		
H - 257 B	Carrying Arm Short Slave Side		
H - 258	Pick Up Pads for Light Trucks		
H - 259	Rear Cover Master Side		
H - 260	Rear Cover Slave Side		
H - 261	Cylinder Guide Master Side		
H - 262	Cylinder Guide Slave Side		
H - 263	Cylinder Cap		
H - 264	Steel Wire Short		
H - 265	Steel Wire Long		
H - 266	Spring		
H - 267	Cover for Equalizing Handle		
H - 269	Push Button		
H - 270	Switch Lifting		
H - 271	Electrical housing		
H - 272	Relais		
H - 273	Spring		
H - 268	O - Ring		
724	Rubber Profile		